

 
DEHUMIDIFIER

除濕機



OWNER'S MANUAL

使用說明書

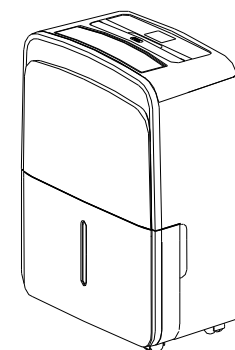

DC-22VS
DC-25VS
DC-28VS

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

由于產品的改進，設計和規範會經常變更，恕不能及時通知。詳情請聯系您的經銷商或是制造商。

Before operating this product, please read the instructions carefully and save this manual for future use.

請在操作之前務必認真閱讀本手冊，并妥善保管作為日后使用時參考！

CONTENTS

Safety precautions	01
Get to know your product	
Get to know your product	04
Get to know the features	07
Dump the collected water	
Dump the collected water	10
Care and Maintenance	13
Troubleshooting	17

Safety Precautions

Must read the warning message.

Read Safety Precautions Before Operation and Installation To prevent death or injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause death, harm or damage.

Explanation of Symbols



WARNING

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



CAUTION

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.

WARNING

- Do not exceed the rating of the power outlet or connection device.
- Do not operate or stop the unit by switching on or off the power.
- Do not damage or use an unspecified power cord.
- Do not modify power cord length or share the outlet with other appliances.
- Do not insert or pull out plug with wet hands.
- Do not install the appliance in a location that may be exposed to combustible gas.
- Do not place the unit near a heat source.
- Disconnect the power if strange sounds, smell, or smoke comes from it.
- You should never try to take apart or repair the unit by yourself.
- Before cleaning, turn off the power and unplug the unit.
- Do not use the machine near flammable gas or combustibles, such as gasoline, benzene, thinner, etc.
- Do not drink or use the water drained from the unit.
- Do not take the water bucket out during operation.
- Do not use the unit in small spaces.
- Do not put in places where water may splash onto the unit.
- Place the unit on a level, sturdy section of the floor.
- Do not cover the intake or exhaust openings with cloths or towels.

- Care should be taken when using the unit in a room with the following persons: infants, children, elderly people, and people not sensitive to humidity.
- Do not use in areas where chemicals are handled.
- Never insert your finger or other foreign objects into grills or openings.
- Take special care to warn children of these dangers.
- Do not place heavy object on the power cord and take care so that the cord is not compressed.
- Do not climb up on or sit on the unit.
- Always insert the filters securely. Clean filter once every two weeks. If water enters the unit, turn the unit off and disconnect the power, contact a qualified service technician.
- Do not place flower vases or other water container on top of the unit.
- Do not use extension cords.

CAUTION

- This appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. (be applicable for the European Countries)
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. (be applicable for other countries except the European Countries)
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- Do not install the appliance in a location that may be exposed to combustible gas. If combustible gas accumulates around the unit, it may cause fire.
- If the appliance is knocked over during use, turn off the unit and unplug it from the main power supply immediately. Visually inspect the unit to ensure there is no damage. If you suspect the unit has been damaged, contact a technician or customer service for assistance. In a thunderstorm, the power must be cut off to avoid damage to the machine due to lightning.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings.
- Do not route cord under furniture or appliances.
Arrange cord away from traffic area and where it will not be tripped over.
- Do not operate unit with a damaged cord or plug. Discard unit or return to an authorized service facility for examination and/or repair.

- To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- The appliance shall be installed in accordance with national wiring regulations.
- Contact the authorised service technician for repair or maintenance of this unit.
- Turn off the product when not in use.

CAUTION

- The manufacturer's nameplate is located on the rear panel of the unit and contains electrical and other technical data specific to this unit.
- Be sure the unit is properly grounded. To minimize shock and fire hazards, proper grounding is important. The power cord is equipped with a three-prong grounding plug for protection against shock hazards.
- Your unit must be used in a properly grounded wall receptacle. If the wall receptacle you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker (please refer to the nameplate for the electrical data), have a qualified electrician install the proper receptacle.
- Do not operate your appliance in a wet room such as a bathroom or laundry room.
- The unit's circuit board (PCB) is designed with a fuse to provide overcurrent protection.
- The specifications of the fuse are printed on the circuit board, such as: T3.15A/250V (or 350V), etc.

Note about Fluorinated Gases (Not applicable to the unit using R290 Refrigerant)

- Fluorinated greenhouse gases are contained in hermetically sealed equipment. For specific information on the type, the amount and the CO₂ equivalent in tonnes of the fluorinated greenhouse gas (on some models), please refer to the relevant label on the unit itself.
- Installation, service, maintenance and repair of this unit must be performed by a certified technician.
- Product uninstallation and recycling must be performed by a certified technician.

CAUTION

- this appliance contains a UV-C lamp, read the maintenance instructions before opening the appliance;
- unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in small doses, cause harm to the eyes and skin;
- appliances that are obviously damaged must not be operated;
- do not operate UV-C lamps outside of the appliance;
- UV-C barriers bearing the ultraviolet radiation hazard symbol should not be removed;
- WARNING: This appliance contains an UV emitter. Do not stare at the light source;
- The UV-C lamp cannot be cleaned, repaired and replaced.

Get to know your product

 
Name of each component of the product

Identification of parts


NOTE

All the illustrations in the manual are for explanation purpose only. Your machine may be slightly different. The actual shape shall prevail. The unit can be controlled by the unit control panel.

Product overview

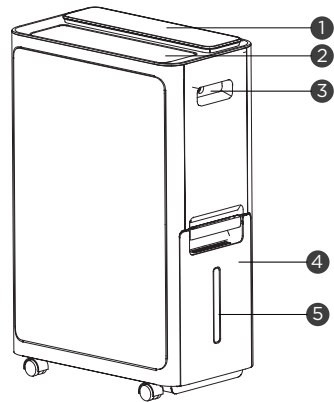

Front View

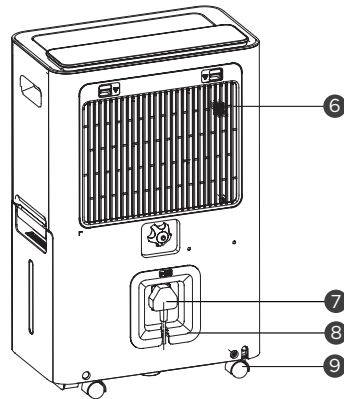 

Back View


- | | |
|-----------------------|-----------------------|
| ① control panel | ⑥ air intake grille |
| ② air outlet louver | ⑦ power cord and plug |
| ③ handle (both sides) | ⑧ hook for power cord |
| ④ water tank | ⑨ caster |
| ⑤ water level window | |

Design Notice

In order to ensure the optimal performance of our products, the design specifications of the unit are subject to change without prior notice.

Positioning the unit

 Safe distance requirements

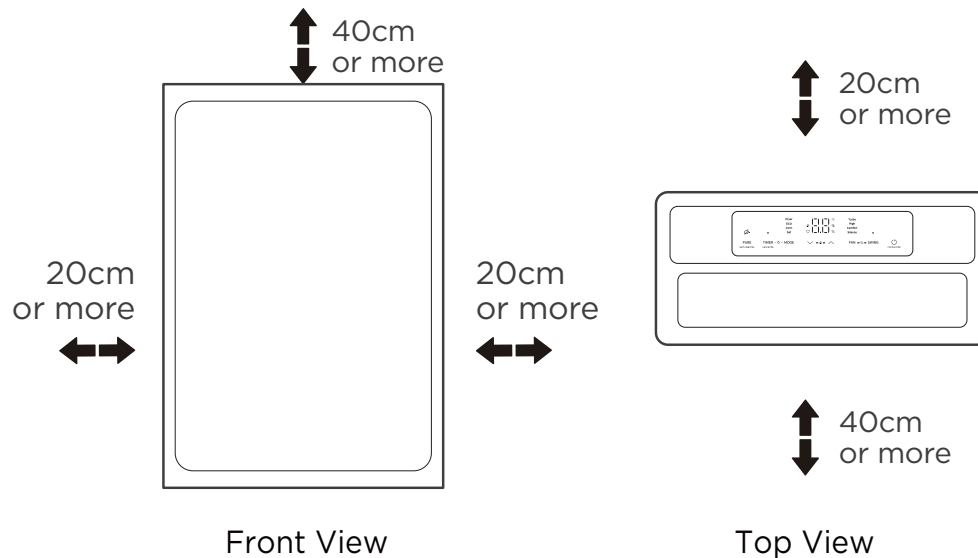

Casters (At four points on the bottom of unit)

- Casters can move freely.
- Do not force casters to move over carpet, nor move the unit with water in the bucket.
(The unit may tip over and spill water.)

A dehumidifier operating in a basement will have little or no effect in drying an adjacent enclosed storage area, such as a closet, unless there is adequate circulation of air in and out of the area.

- Do not use outdoors.
- This dehumidifier is intended for indoor residential applications only. This dehumidifier should not be used for commercial or industrial applications.
- Place the dehumidifier on a smooth, level floor strong enough to support the unit with a full bucket of water.
- Allow at least 20cm of air space on all sides of the unit for good air circulation (at least 40cm of air space on air outlet).
- Place the unit in an area where the temperature will not fall below 5° C (41° F). The coils can become covered with frost at temperatures below 5° C (41° F), which may reduce performance.
- Place the unit away from the clothes dryer, heater or radiator.
- Use the unit to prevent moisture damage anywhere books or valuables are stored.
- Use the dehumidifier in a basement to help prevent moisture damage.
- The dehumidifier must be operated in an enclosed area to be most effective.
- Close all doors, windows and other outside openings to the room.

When using your product

Preparations for product use.

 
- This unit is designed to operate with a working environment between 5°C/41°F and 32°C/90°F, and between 30%(RH) and 80%(RH).
- If the unit has been switched off and needs to be switched on again quickly, allow approximately three minutes for the correct operation to resume.
- Do not connect the dehumidifier to a multiple socket outlet, which is also being used for other electrical appliances.
- Select a suitable location, making sure you have easy access to an electrical outlet.
- Plug the unit into a electrical socket-outlet with earth connection.
- Make sure the Water bucket is correctly fitted otherwise the unit will not operate properly.

NOTE

When the water in the bucket reaches to a certain level, please be careful to move the machine to avoid it falling down.

Accessories

Accessories

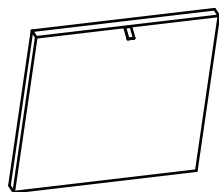


Big HEPA filter(1 pc)

Optional accessories



 Functional filter(1 pc)



pump drain hose*1 pc
(For the unit with pump feature)

 
Get to know the features

Control Panel Features

NOTE

The following control panels are for explanation purpose only. The control panel of the unit you purchased may be slightly different according to the models. Your machine may not contain some indicators or buttons. The actual shape shall prevail.

When the machine is turned on or off, or when the mode is switched on, there will be a slightly obvious sound of compressor operation, because the compressor frequency is increased or decreased, it is normal.

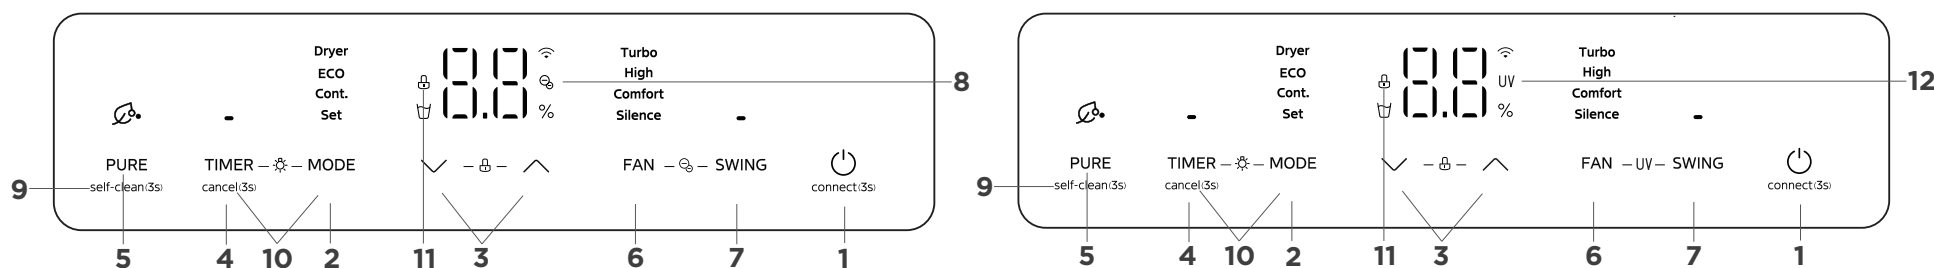

Indicator	Function	Indicator	Function	Indicator	Function	Indicator	Function
	Wireless light		Water filled lamp light		Display ON /OFF light		UV-C lamp light
	Fresh light		Purification mode light		Control panel locking light		

1.POWER ON/OFF button

Press to turn the dehumidifier on or off.

NOTE:When the compressor startups or stops running, the unit may make a loud voice, it is normal. After each turn on, The negative ion function is enabled by default.

2.MODE Function

Each time you press the MODE button, you can cycle between: ECO -Set-Cont.-Dryer-ECO mode.

NOTE:When switching mode or power on, it will display the setting humidity for 3 seconds. After 3 seconds, it will switch back to the ambient humidity display.

ECO MODE

Press the Mode button and select ECO mode. In Smart dehumidification mode, you can press the UP and DOWN buttons to adjust the humidity. The humidity range is 35% to 85%. The default value is 60%.

NOTE: When this function is selected, FAN speed regulation is not available.

SET MODE

Press the Mode button and select Set mode. When this mode is selected, it will display the setting humidity for 3 seconds. After 3 seconds, it will switch back to the ambient humidity display.

CONT. MODE

Press the Mode button and select Cont. mode.

NOTE : When this function is selected, the setting humidity will not be displayed. In this mode, the setting humidity cannot be adjusted.

DRYER MODE

Press the Mode button and select Dryer mode.

NOTE: When this mode is selected, the continuous dehumidification function is enabled and the high speed FAN mode is accompanied. Setting humidity and FAN speed cannot be adjusted in this mode.

3.Up and Down buttons

Humidity Set Control buttons

In Setting dehumidifying mode, The humidity level can be set within a range of 35%RH(Relative Humidity) to 85%RH(Relative Humidity) in 5% increments. Press and hold the $\vee$ button the humidity drop continuously. Press and hold the $\wedge$ button the humidity rise continuously.

4.TIMER Function

- Press Timer button, the TIMER indicator light illuminates. It indicates the Auto Start or Auto Stop program is initiated. For some units, continuing to press the Timer button will cancel the timer settings.
- Press or hold the UP or DOWN button to change the Auto time by 0.5 hour increments, up to 10 hours, then at 1 hour increments up to 24 hours. The control will count down the time remaining until start.
- The selected time will register in 5 seconds, and the system will automatically revert back to display the previous humidity setting or room humidity when the unit is on. When the unit is off, there is no display.

- Turning the unit ON or OFF at any time or adjusting the timer setting to 0.0 will cancel the Auto Start/Stop timed program.

5.PURIFY Function

Power ON/OFF, press this button to enter the PURIFY function. After the function is on, 3 seconds 'On' will be displayed.

6.FAN Function

Under startup state, press this button to switch between Turbo→High→Comfort→Silence→Turbo Sets the FAN speed.

7.SWING Function

Under startup state, press this button to turn on or off the SWING function.

8.ION Function

In the startup state, press the FAN and SWING buttons at the same time and continue for 3 seconds to enable/disable the negative ion function.

NOTE:When you open the PURIFY Function, you can switch this function ON/OFF.

9.Self-clean- Function

Turn this function ON/OFF by press the PURIFY button for 3 seconds.

10.DISPLAY

In the startup state, press TIMER and MODE keys and continue for 3 seconds to turn on/off the digital display function.

11.Child Lock Function

Press Up and DOWN buttons for 3 seconds to lock or unlock the control panel.

12.UV Light optional

Press the FAN and SWING buttons for 3 seconds to turn the ION/UV function on or off.

Display

Shows Error codes and protection code: The unit may stop operation or continue to run safely. If the error codes appear, wait for about 10 minutes. The problem may resolve itself. If not, disconnect the power, then connect it again. Turn the unit on. If the problem persists, disconnect the power and contact your nearest customer service center. Error code appears and begins with the letters as the following in the window display of indoor unit: EH(xx), EL(xx), EC(xx), PH(xx), PL(xx), PC(xx)

More features

Wireless operation(on some models):

 
- For the first time to use Wifi function, press the POWER button for 3 seconds to initiate the Wifi connection mode. The LED DISPLAY shows 'AP' to indicate you can set Wifi connection. If connection (router) is successful within 8 minutes, the unit will exit Wifi connection mode automatically and the Wireless indicator illuminates. If connection is failure within 8 minutes, the unit exits Wifi connection mode automatically.

Electronic Work



WARNING:

BEFORE PERFORMING ANY ELECTRICAL OR WIRING WORK, TURN OFF THE MAIN POWER TO THE SYSTEM.

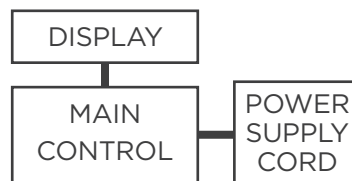


NOTE: The cographs are for explanation purpose only. Your machine may be slightly different. The actual shape shall prevail.

Dump the collected water


When your product has been
in use for a while.

 There are two ways to remove collected water.

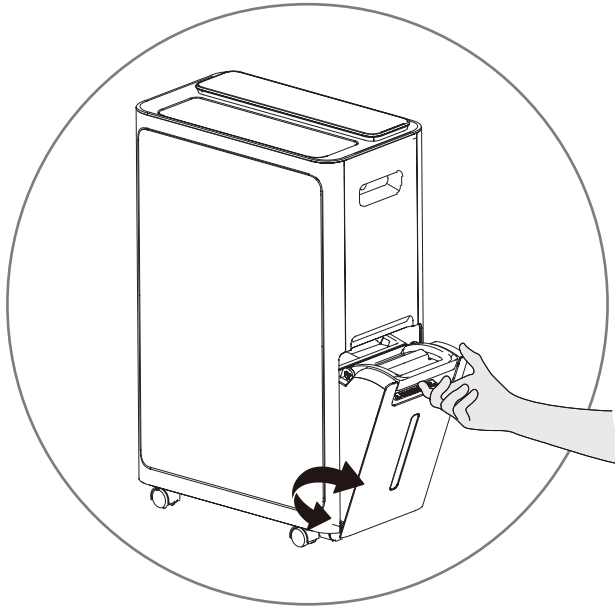

Type 1:

 Bucket drainage

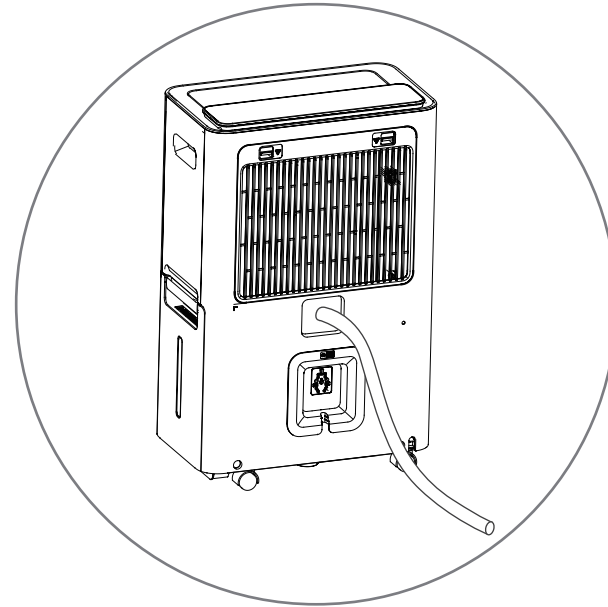

Type 2:


**water hose drainage
(continuous)**

Bucket drainage

Type 1

NOTE

 
- When you remove the bucket from the unit do not set the unit on any electrical components as the bottom may be wet.
- Do not set the unit on an uneven surface after removing it from the bucket.
- Ensure the unit is seated properly after returning into the bucket.
- If the bucket is removed during operation, empty bucket icon on the display will blink and stop working until the bucket is seated.

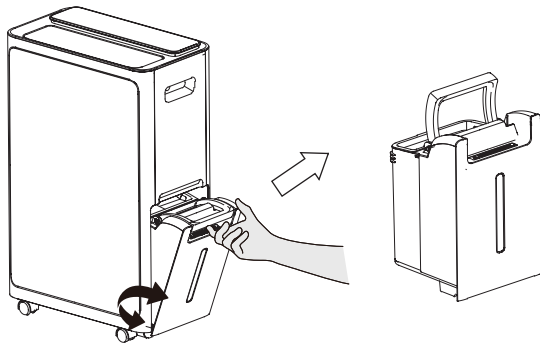

1

Pull out the bucket.

 
Grab the handle and pull out the tank.

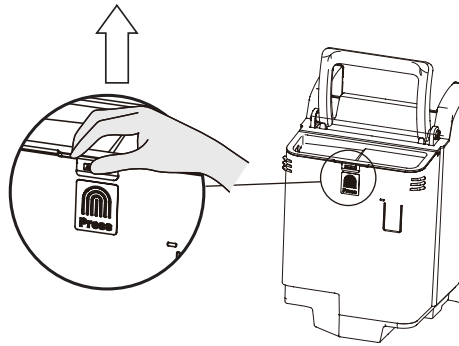

2

Open the cover.

 Grab the clasp and pull up.

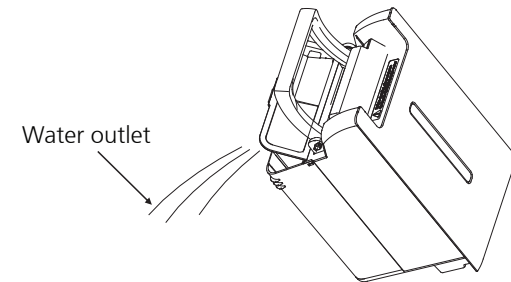

3

Pour the water out.


Pour the water out.(The bucket of the unit you purchased may be slightly different)

water hose drainage (continuous)

Type 2

NOTE

 
- Make sure the hose is secure so there are no leaks.
- Place the end of the hose into the drain outlet and make sure the end of the hose is level or downwards to let the water flow smoothly and making sure that there are no kinks will stop the water flowing. Do never let it up.
- Make sure the end of hose is lower than the drain hose outlet.
- Desired humidity setting can not be setting in the continuous mode, but fan speed can be adjustment.

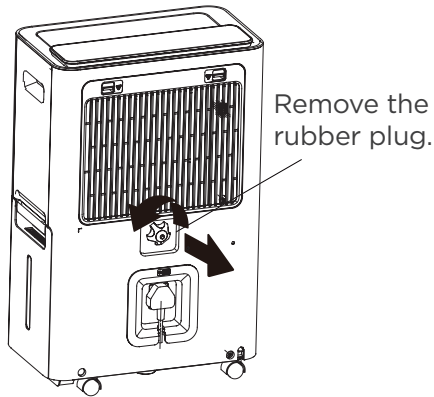

1

Remove the rubber plug.

 Remove the continuous outlet cover by turning it counterclockwise

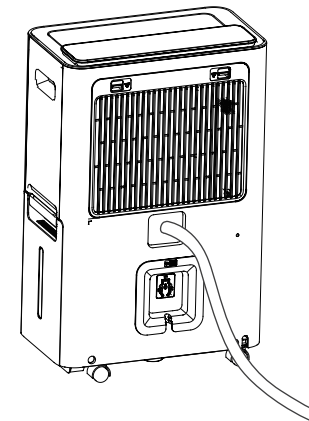

2

Attach the drain hose. (not include)

Connect drainpipes (not included)

Care and Maintenance

How to clean & maintenance your product.

Turn the dehumidifier off and disconnect the plug from the power source before cleaning.

Clean the Grill and Case

 
- Use water and a mild detergent. Do not use bleach or abrasives.
- Do not splash water directly onto the main unit. Doing so may cause an electrical shock, cause the insulation to deteriorate, or cause the unit to rust.
- The air intake and outlet grilles get soiled easily, so use a vacuum attachment or brush to clean.

Clean the bucket


- Every few weeks, clean the bucket thoroughly. Partially fill the bucket with clean water and mild detergent. Swish it around in the bucket, empty and rinse.

NOTE: Do not use a dishwasher to clean the bucket. After clean, the bucket must be in place and securely seated for the dehumidifier to operate.


1. Press one side of the handle inward and lift it up.

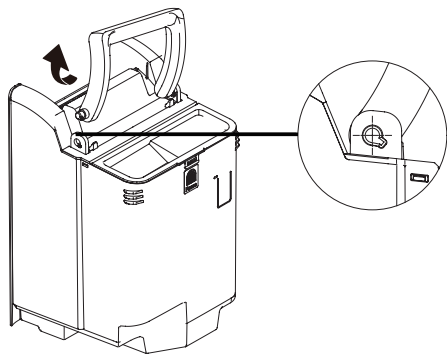

 2. Press the fingerprint in the middle of the water tank to make the water tank cover up.

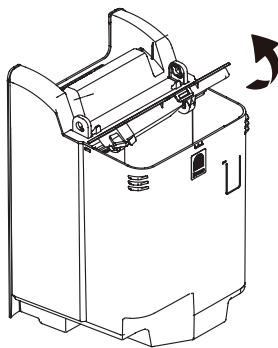

 3. Hold the inside of the tank cover and lift the whole tank cover upward. Clean the components of the tank, dry them naturally, and then reinstall them according to the above steps.

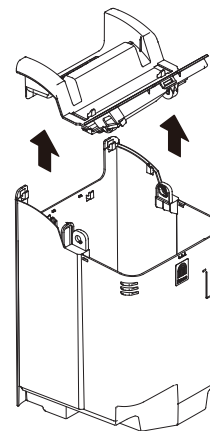

NOTE: When installing the handle, install the clasps on both sides of the handle corresponding to the mounting holes. Otherwise, the handle cannot be properly installed and reset.

Clean the air filter

The air filter behind the front grille should be checked and cleaned at least every two weeks or more often if necessary.

 
NOTE: DO NOT RINSE OR PUT THE FILTER IN AN AUTOMATIC DISHWASHER.

To remove:



- Press down the tab on the filter and pull it outward, then take it out.
- Clean the filter with warm, soapy water. Rinse and let the filter dry before replacing it. Do not clean the filter in a dishwasher.

To attach:

- Insert the air filter and HEPA filter into the unit from underside to upside.

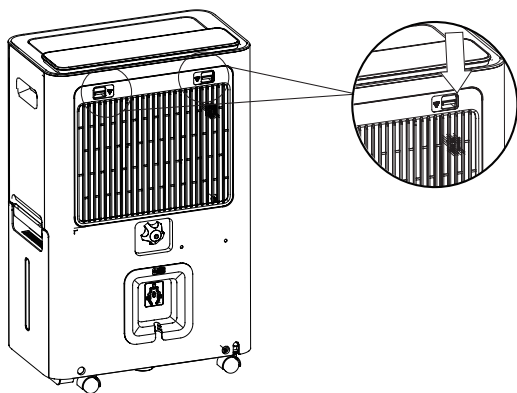


1 Remove the rear grille.

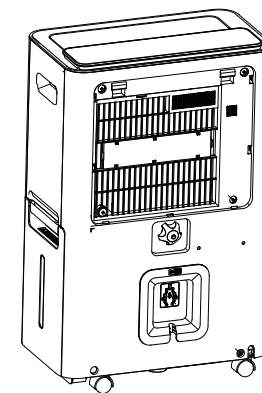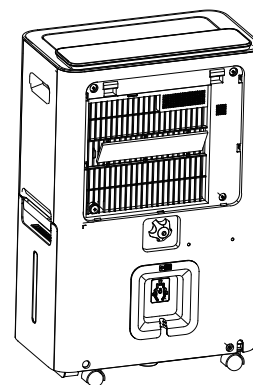  


2 Install the functional filter into the rear grille.

NOTE: The functional filter is optional.

 3 Install big HEPA filter with handle strap. Mount outwards for replacement.

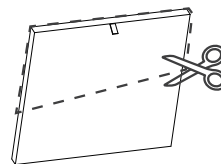

 NOTE: Be sure to remove the plastic sealing film before using big HEPA filter.

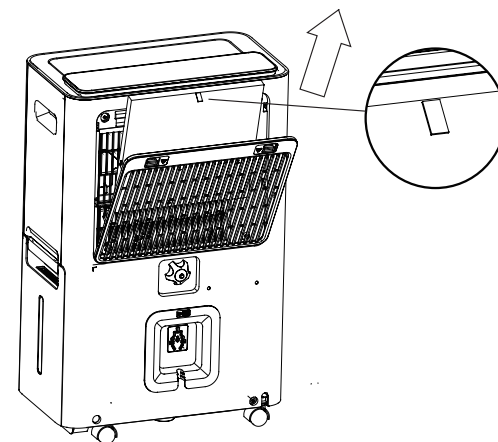


CAUTION

DO NOT operate the dehumidifier without a filter because dirt and lint will clog it and reduce performance.

NOTE: The cabinet and front may be dusted with an oil-free cloth or washed with a cloth dampened in a solution of warm water and mild liquid dishwashing detergent. Rinse thoroughly and wipe dry. Never use harsh cleansers, wax or polish on the cabinet front. Be sure to wring excess water from the cloth before wiping around the controls. Excess water in or around the controls may cause damage to the unit.

 When not using the unit for long time periods

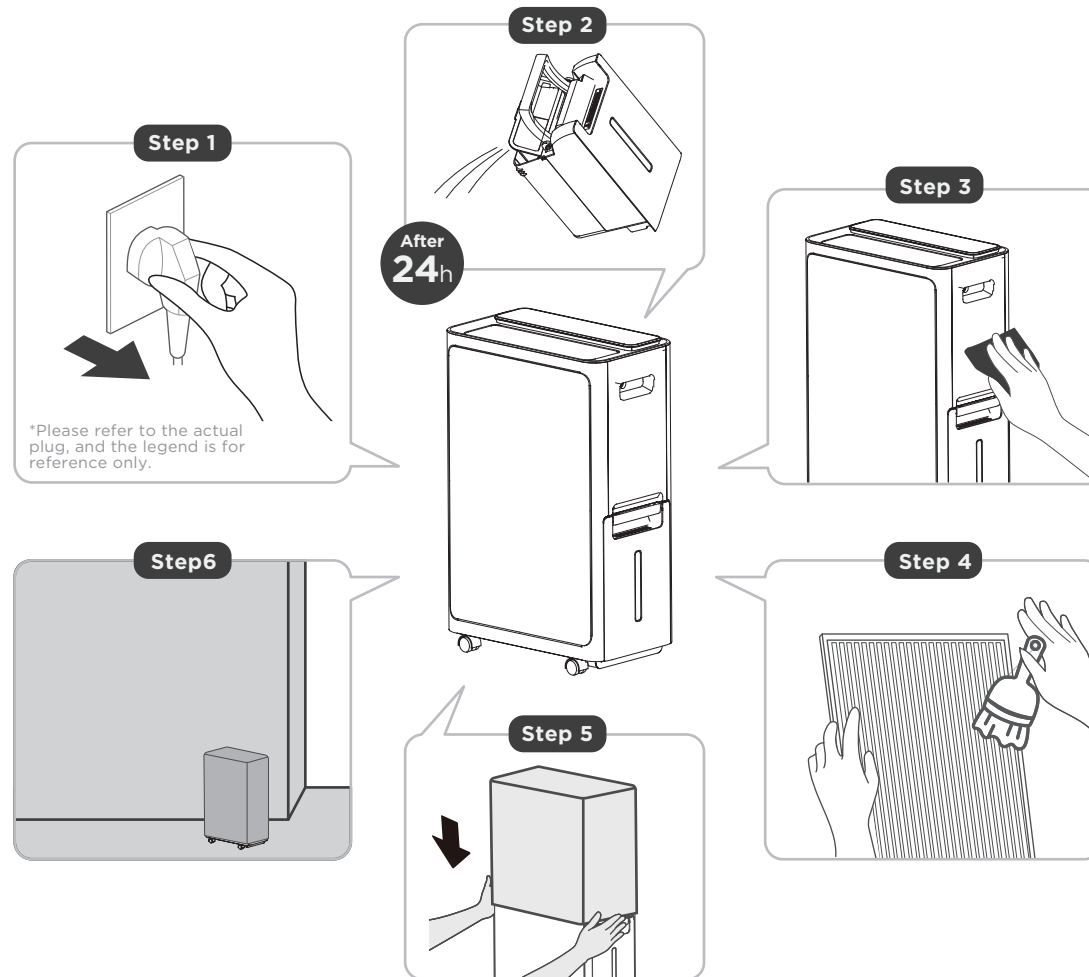

- Step 1: Unplug the product, after turning off the unit.
- Step 2: Empty the bucket after 24 hours of unplugging.
- Step 3&4: Clean the main unit, water bucket and air filter.
- Step 5: Cover the unit with a plastic bag.
- Step 6: Store the unit upright in a dry, well-ventilated place.

Troubleshooting

Before calling for service, review the chart below first yourself.

Problem	What to check
Unit does not start	Make sure the dehumidifiers plug is pushed completely into the outlet. Check the house fuse/circuit breaker box. Dehumidifier has reached its preset level or bucket is full. Water bucket is not in the proper position.
Dehumidifier does not dry the air as it should	Do not allow enough time to remove the moisture. Make sure there are no curtains, blinds or furniture blocking the front or back of the dehumidifier. The humidity control may not be set low enough. Check that all doors, windows and other openings are securely closed. Room temperature is too low , below 5 °C (41F °). There is a kerosene heater or something giving off water vapor in the room.
The unit makes a loud noise when operating	The air filter is clogged. The unit is tilted instead of upright as it should be. The floor surface is not level.
Frost appears on the coils	This is normal. The dehumidifier has Auto defrost feature.
Water on floor	Hose to connector or hose connection may be loose.
EH(xx), EL(xx), EC(xx), PH(xx), PL(xx), PC(xx) appear in the display	These are error codes and protection codes. See the CONTROL PANEL FEATURES section.

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details. Any updates to the manual will be uploaded to the service website, please check for the latest version.

CD001UI-DI
16120100001297
20230318